
# Pushfit

### Installation Guide for Talbot Pushfit fittings

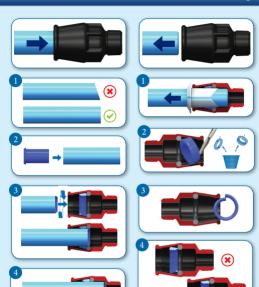

- 1. Ensure pipe is cut at 90°
- 2. Insert the Liner into the pipe
- 3. Push the pipe fully into the fitting with a slight twist Ensure that the pipe passes two points of resistance.
- 4. Pipe should be fully seated

All fittings should be witness marked with the depth if insertion to ensure correct installation.

The O-rings come pre lubricated however if extra lubrication is required please use an approved potable water lubricant.

- 1. Slide the extractor tools home and withdraw the pipe.
- 2. Extract the grip ring with a screwdriver. Do not re-use the grip ring. Extract and inspect
- the 'O' ring. Replace it if damaged.
- Insert a new grip ring forming a figure '6' and pressing it in.
- Ensure that the grip ring is inserted the correct way round.

## Talbot Pushfit fittings

#### Technical data

Working pressure: 16 bar

Test pressure: 24 bar

The pressures stated above apply with water temperatures up to 20°C

Temperature: Up to 40°



Description	Material
Bodies	
Plastic Fittings	Acetal/Polypropylene
Gunmetal Fittings	Cast Gunmetal
Brass Fittings	DZR Brass
Aluminium Fittings	Cast Aluminium
Components	
Grip Ring	Acetal
'0' Ring	EPDM BS EN 681
Liner	Polypropylene/Acetal
Reinforcing Ring	Stainless Steel Grade 304











#### TALIS UK

Brackla Industrial Estate Bridgend, Wales CF31 2AX United Kingdom

United Kingdom

PHONE +44 (0)845 077 9797

FAX +44 (0)845 077 9798

E-MAIL enquiries@talis-group.com

INTERNET www.talis-uk.com



